



**Preventive Maintenance Schedule**

I - Inspect      C - Clean      R - Replace

	Year 1 1 visit	Comments
<b>FUEL</b>		
Fuel Lines and Connections	I	
Flexible Fuel Line	I	
<b>LUBRICATION</b>		
Oil Level	I	
Oil (5w-30 synthetic)	R	Every 200 Hours or Annually
Oil Filter	R	Every 200 Hours or Annually
<b>COOLING</b>		
Enclosure Louver	I / C	
<b>GENERAL CONDITION</b>		
Vibration, noise, leakage, temp	I	
<b>BATTERY</b>		
Remove corrosion, ensure dryness	I / C	
Clean and Tighten Battery terminals	I / C	
Check Charge State	I	
Electrolyte level***	I / R	
<b>BATTERY CABLE</b>		
Remove corrosion, clean & tighten	I	
<b>OUTSIDE ENCLOSURE</b>		
Clean	C	
<b>ENGINE AND MOUNTING</b>		
Air Cleaner***	I / R	
Spark Plug(s)***	I / R	
Apply corrosion inhibiting spray to engine parts	I	
<b>EXTERNAL CONNECTION BOX</b>		
Tighten Terminals	I	
Check for Proper Operation	I	
Check Control Wiring Connection	I	
<b>ELECTRICAL SYSTEMS</b>		
No Load Voltage	I	
Line to line - 240 volts	I	
Line to neutral - 120 volts	I	
Line to ground - 120 volts	I	
Grounding Conductor	I	
Earth Ground	I	
DC control fuse	I	
Battery Charger fuse	I	
Auto/off/manual switch	I	
levelness of generator	I	

\*\*\*replace as necessary